

S6500 UI module – RS232 Console Commands

READ CONFIG (*Shows the current configuration*)

READ ALARM (*Shows active alarms*)

ENABLE (*Switches console to read/write mode*)

DISABLE (*Switches console to read only mode*)

WRITE RS232 PASSWORD [0000 - 9999] (0000)

WRITE SYS DIMMING [0 – 3] (3)

WRITE SYS LOADCALC [CUR, LOAD] (CUR)

WRITE SYS SETUPDEFAULT [YES, NO] (NO)



SELCOUSA.com