

S6500 UI Menu Structure

System

- Load Calculation
 - Current (o)
 - Load ()
- Set Pincode
 - 0000
- Setup Default
 - Yes ()
 - No (o)
- Revision Info
 - YYMMDD

RS232

- Baud Rate
 - 1200 ()
 - 2400 ()
 - 4800 ()
 - 9600 (o)
 - 19200 ()
- Parity
 - None (o)
 - Even ()
 - Odd ()
- Data Bits
 - 7 ()
 - 8 (o)
- StopBits
 - 1 (o)
 - 2 ()

