



- Direct connection up to 690V line voltage, up to 6,6kV with HV adapter
- Monitoring during both live and standby conditions
- For use in land, marine, offshore, sub-sea and ocean floor Installations
- Comply with AODC 035 Code of Practice
- "Megger" - safe to 1.4kVDC when aux power is OFF
- Immune to earth capacitance and voltage surges
- Analogue output proportional to meter reading (F-version)
- Optional slave indicator

Specifications


General	
Auxiliary Supply:	100-120, 200-240, 380-415 or 440-460VAC, 40-70Hz (Fuse 0.5A)
Optional Voltage:	12-24, 48 or 110VDC (Fuse 2A)
Contact rating:	AC: 100VA - 250V/2A max. DC: 50W - 100V/1A max.
Analogue Output:	Up to 20mA, max 500R
F-versions	Up to 10V, min 100kohm (other on request)
Temperature:	-20 to +70°C
Weight:	0.6kgs
Front protection:	IP21

Application

The digitally controlled KCM163x series monitors insulation level between a non-grounded (IT) AC mains and its protective earth, regardless of whether the mains is live or non-live (standby). The unit is for land, marine, offshore, sub-sea and ocean floor use.

An AC or DC auxiliary voltage is required for the unit, if powered from a separate source the network can also be monitored during standby conditions. Only **ONE** KCM163x can be connected to each IT-system. The ohmmeter and the triple-zone status LEDs give at a glance the clear safety message:

- ALARM (red zone)
- WARNING (yellow zone)
- HEALTHY (green zone)

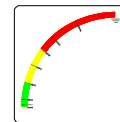

INTELLIGENT SETTING ASSISTANCE

KCM163x has a built-in Assistance tool for setting/verification of the trip levels and the analogue output.

When either the **Warning** or **Alarm** potmeter on the front is operated by user, the slave meter goes into **Assistance Mode** and meter reading and analogue output will reflect the potmeter setting.

How to set alarm levels:

Firstly adjust potmeter fully clockwise (see that slave meter goes to the top), then adjust potmeter down to required **Warning** or **Alarm** setpoint.



Without any movement of potmeters, the meter will revert to normal Insulation Monitoring Mode after approximately 10 seconds.

How to test analogue output signal:

Adjust any trip level potmeter to activate Assistance Mode. **Example:** On a 4-20mA output, adjust potmeter fully anti clockwise for 4mA and fully clockwise for 20mA.

The KCM163x range is designed to comply with specification AODC035 "Code of Practice for the Safe Use of Electricity Under Water" issued by IMCA.

The unit meets IEC60092-504 and the relevant environmental and EMC tests specified in IEC60068/60092 and IEC61000/60533 respectively, to comply with the requirements of the major Classification Societies.

General

IDV MEASURING PRINCIPLE

Insulation is measured between the complete galvanically interconnected AC network and its protective earth.

The unit injects a sequentially coded measuring signal into the monitored system. The signal flows to ground via the path of the insulation fault, the level of flow indicates the insulation resistance. The measuring accuracy is not influenced by any normal kind of load attached to the AC network.

Trip levels and delays are settable on unit rear. A trip LED flashes when the trip level is passed, the relay trips when the delay has elapsed. The timer resets if the fault is removed during countdown.

MEGGER SAFE

When auxiliary power is **OFF** the unit input is automatically protected against "megger" test voltages up to 1.4kVDC, and incorrect measurements caused by the unit's input impedance are avoided.

OUTPUTS

All F versions have an isolated **analogue output** proportional to meter reading. If output is used for remote meter reading, we recommend 0-1mA for the slave indicator.

SAFETY

When a voltage adapter (CHx or ANx) is used the signal to terminals 4 and 6 on KCM163x is limited to a safe level, avoiding any dangerous voltage exposure to personnel.

NOTE

Special versions of the KCM163x are available as:

KCM163xM series - Insulation Guards with DC detection function, protected against **high-energy** DC voltage imposed on the monitored AC supply.

KCM263x series - Insulation Guards with measuring loop continuity monitoring.



Description

KCM163E & KCM163F - KCM163G & KCM163GF

This unit is used for marine, ROV and offshore installations. Start of monitoring function is delayed when auxiliary power is switched on (default 10 secs delay). The unit has minimum 150 mS detection time for any insulation fault. **(Recommended for thruster standby monitoring)**

Direct connection up to 690V line voltage. Up to 6,6kV via HV adaptor CH163x or AN6,6 series.

Relay Operation


Scale range: 0-10MΩ - ∞ (>60MΩ)

	Warning	Alarm	Fail Safe	Latch
R1	✓			
R2		✓	✓	* / ✓
R3		✓	✓	* / ✓

Model	Latch	Output	Adjustments	Trip level	Delay
KCM163E	-	-	WARNING:	0-10MΩ	0-30secs
KCM163F	-	X	ALARM:	0-10MΩ	0,1-3secs
KCM163G*	X	-			
KCM163GF*	X	X			

Coloured sectors show recommended areas of settings:
 ■ - Indicates alarm trip zone
 ■ - Indicates warning trip zone
 ■ - Indicates healthy zone


Output diagram

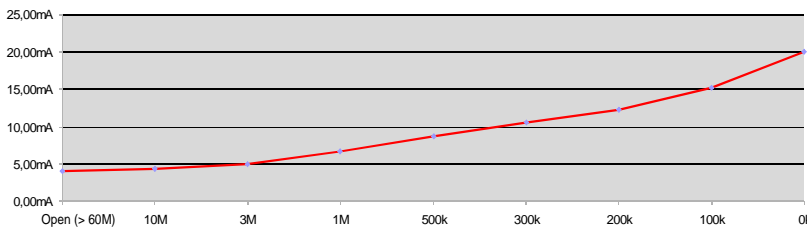

Output table (example for 4-20mA)

Value (scale)	mA output
0kΩ	20.00mA
100kΩ	15.18mA
200kΩ	12.30mA
300kΩ	10.59mA
500kΩ	8.67mA
1MΩ	6.69mA
3MΩ	4.98mA
10MΩ	4.28mA
Open (60MΩ)	4.00mA

Range (slave indicator)

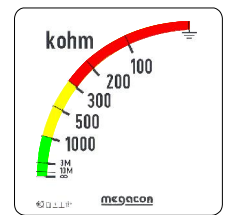

Description

KCM163E2 - KCM163F2 - KCM163G2 & KCM163GF2

This unit is used for marine, ROV and offshore installations. Start of monitoring function is delayed when auxiliary power is switched on (default 10 secs delay). The unit has minimum 150 mS detection time for any insulation fault. **(Recommended for thruster standby monitoring)**

Direct connection up to 690V line voltage. Up to 6,6kV via HV adaptor CH163x or AN6,6 series.

Relay Operation


Scale range: 0-10MΩ - ∞ (>60MΩ)

	Warning	Alarm	Fail Safe	Latch
R1	✓			
R2		✓	✓	* / ✓
R3		✓	✓	* / ✓

Model	Latch	Output	Adjustments	Trip level	Delay
KCM163E2	-	-	WARNING:	0-10MΩ	0-30secs
KCM163F2	-	X	ALARM:	0-10MΩ	0,1-3secs
KCM163G2*	X	-			
KCM163GF2*	X	X			


Coloured sectors show recommended areas of settings:
 ■ - Indicates alarm trip zone
 ■ - Indicates warning trip zone
 ■ - Indicates healthy zone

Output diagram

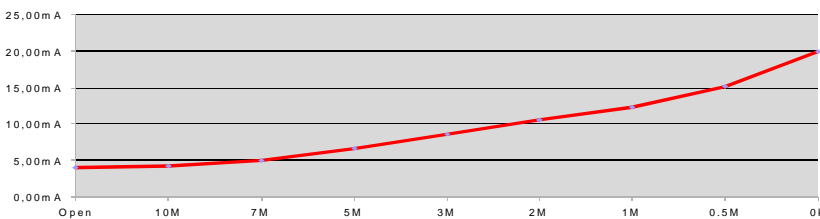

Output table (example for 4-20mA)

Value (scale)	mA output
0kΩ	20.00mA
0.5MΩ	15.18mA
1MΩ	12.30mA
2MΩ	10.59mA
3MΩ	8.67mA
5MΩ	6.69mA
7MΩ	4.98mA
10MΩ	4.28mA
Open (60MΩ)	4.00mA

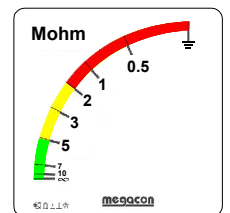

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.



Description

KCM163H & KCM163HF - KCM163HG & KCM163HGF

This unit is specifically designed for sub-sea monitoring and includes the advanced **Load Distortion and Earth-capacitance Detector (LDED)**.

The **LDED** function differentiates between a true (resistive) or a false (capacitive) drop in insulation reading, and will maintain reliable and accurate insulation monitoring even if load switching or a major change in load spread capacitance cause meter indication to drop **below** set relay trip levels. This situation may occur due to the latent high RC product at the high end part of the measuring range. The LDED will then momentarily inhibit all monitoring functions, freeze operation of meter, lamp display, alarm relays and analogue output for duration of a monitoring irregularity.

The unit will restore normal operation at the moment meter deflection rises **above** set alarm trip levels. **The LDED function has minimum 1 secs detection time for any insulation fault.**

Direct connection up to 690V line voltage. Up to 6,6kV via HV adaptor CH163x or AN6,6 series.

Relay Operation


Scale range: 0-10MΩ - ∞ (>60MΩ)

	Warning	Alarm	Fail Safe	Latch
R1	✓			
R2		✓	✓	*/✓
R3		✓	✓	*/✓

Model	Latch	Output	Adjustments	Trip level	Delay
KCM163H	-	-	WARNING:	0-10MΩ	0-30secs
KCM163HF	-	X	ALARM:	0-10MΩ	0,1-3secs
KCM163HG*	X	-			
KCM163HGF*	X	X			

Coloured sectors show recommended areas of settings:
■ - Indicates alarm trip zone
■ - Indicates warning trip zone
■ - Indicates healthy zone


Output diagram

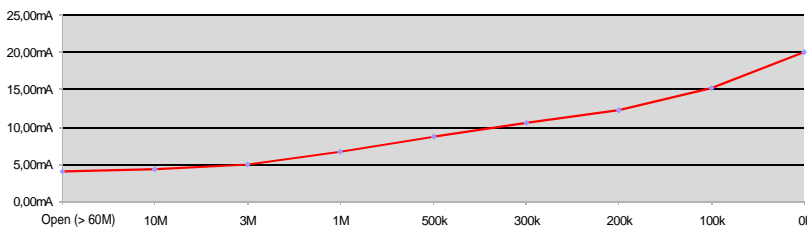

Output table (example for 4-20mA)

Value (scale)	mA output
0kΩ	20.00mA
100kΩ	15.18mA
200kΩ	12.30mA
300kΩ	10.59mA
500kΩ	8.67mA
1MΩ	6.69mA
3MΩ	4.98mA
10MΩ	4.28mA
Open (60MΩ)	4.00mA

Range (slave indicator)

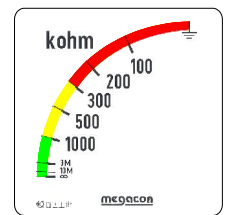

High Voltage Adaptors up to 6,6kVAC for KCM163x series

- HV Adaptor for AC Insulation Guards
- CH163x series, up to 5000V Line Voltage live or non-live (standby)
- AN6,6 up to 6600V System Voltage live or non-live (Starpoint/Neutral connection only)
- Creates safety barrier from live HT network to LV switchboard
- Limits measuring output signal to safe levels
- No restrictions on distance between adapter and LV switchboard

Voltage Adaptors CH163x series and AN6,6 are used for Insulation Guard KCM163x when the monitored line voltage is higher than 690VAC. These adapters are a passive low-pass filter for use in 50, 60 or 400Hz networks, and is potted in polyurethane.

These units includes high inductance reactance modules, connected in a special configuration to avoid DC saturation. These Adapters maintains a high AC suppression of its signal output to very low, safe levels, under all conditions.

Caution

Terminal 1 must be disconnected during "megger" test.



CH163/1,4 up to 1.4kVAC



CH163/3,6 up to 3.6kVAC




CH163/5 up to 5kVAC



AN6,6 up to 6,6kVAC

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.



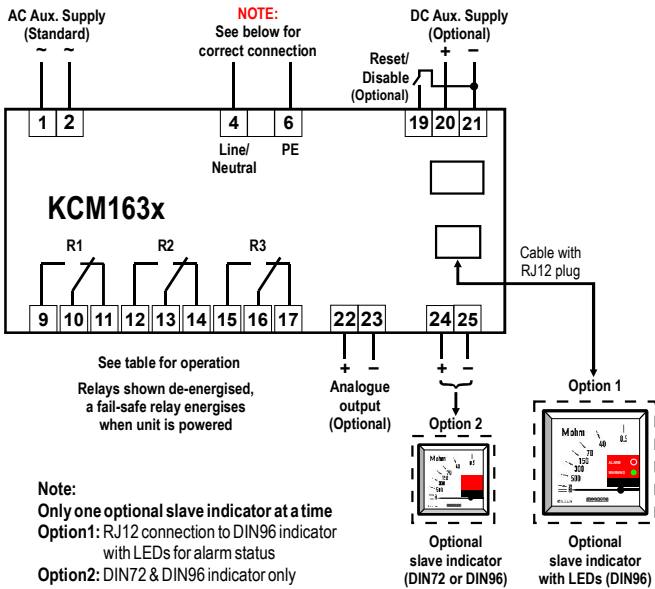

Analogue Output

KCM163F, KCM163GF, KCM163F2, KCM163GF2, KCM163HF and KCM163HGF have an analogue output proportional to meter reading. (Special outputs are available on request)

Add suffix from table below to type designation to specify output required:

O/P1	0 - 10mA	O/P6	N/A
O/P2	0 - 20mA	O/P7	N/A
O/P3	4 - 20mA	O/P8	0 - 10VDC
O/P4	N/A	O/P9	N/A
O/P5	N/A	O/P10	N/A


Reset / Paralleling Disable Function

KCM163x has a built-in disable function (available only when DC Aux. Supply is applied). When connecting two or more IT-networks together **only one unit** can be active, the other(s) must be disabled. When unit is disabled the power led will flash every 2 seconds to indicate that unit is inactive.



Use a potential free contact on terminal 19 and 21 to activate the disable function (after 2 secs). When activated the measuring input terminal 4 will be internally disconnected.

A pulse (60mS-2 Sec) on terminal 19,21 will only reset any latching alarm.

NEUTRAL VOLTAGE INPUT

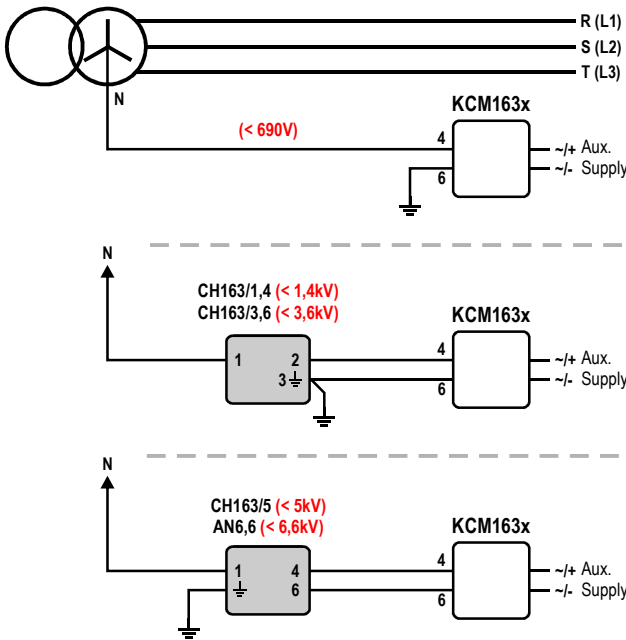


LINE VOLTAGE INPUT

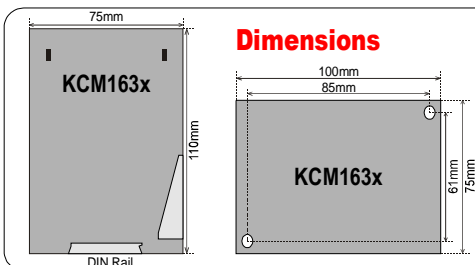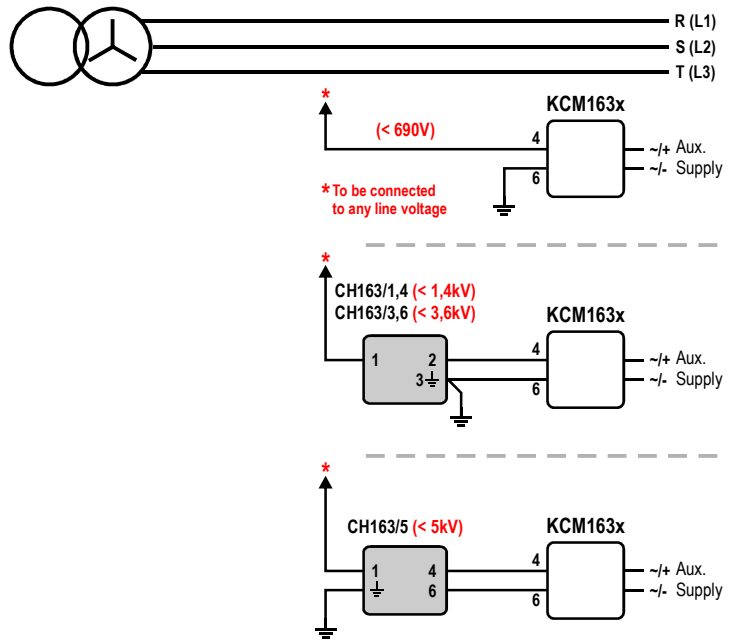

Dimensions for Slave instrument

	DIN 72	DIN96
A	72 x 72mm	96 X 96mm
B	68 x 68mm	92 x 92mm
C	64mm	64mm

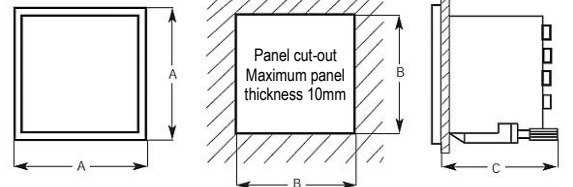

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

ORDERING EXAMPLE:

Type: KCM163F
 Aux. Supply: 200-240VAC
 Network Voltage: 3,6kVAC
 Analogue O/P: (O/P3) 4-20mA
 Range: 0 - 10Mohm

