



- 24 channel earth leakage monitoring of LIVE 6 to 60VDC networks
- Tailored to any current range in any number of networks
- Reads each channel's leakage current 0 to 100mA
- "Pathfinder" function displays polarity of earth leakage
- Set and view parameters on unit screen
- Healthy / Warning / Alarm C/O relay outputs
- "Highest up" 4-20mA signal & RS-485 Modbus RTU outputs

Specifications

Auxiliary voltage:	24-240V universal AC or DC (Fuse 2A)	
Model for DC networks:	ISOPAK200 (up to 24 channels)	
Factory settings: (FSD)	Individual channel measuring range: 30, 100, 300, 500mA	
Measuring method:	MCR	
Response time:	Max 1200mS	
Repeatability:	0,5% FSD	
Warning trip level:	0-100% FSD (individually user setable)	
Alarm trip level:	0-100% FSD (individually user setable)	
Relay time delay:	1-30 secs. (individually user setable)	
Analogue output:	4/20mA, max 500R (proportional to highest up earth leakage)	
Communication:	RS485 Modbus RTU	
Outputs relays:	Volt free changeover	
Relay contact rating:	AC: 100VA - 250V/2A max. DC: 50W - 100V/1A max.	
Temperature:	-20 to +54°C	
Front protection:	IP21	
Dimensions:	L x H x D:	Weight:
ISOPAK200 (standard)	157 x 95 x 78mm	0,27kgs
ISOPAK200W (optional)	157 x 95 x 65mm	0,27kgs
ISOVIEW200 (optional)	96 x 96 x 58mm	0,18kgs
MML204	70 x 95 x 58mm	0,13kgs
SAG204/V1	156 x 46 x 60mm	0,20kgs
SAG204/V2	91 x 82 x 70mm	0,19kgs
Communication cable: (optional)	Length from 1 meters upwards	

Unit meets IEC60092-504 and relevant environmental and EMC tests specified in IEC60068/60092 and IEC61000/60533 respectively, to comply with Classification Societies requirements.

Description

The digitally controlled ISOPAK2xx adds to Megacon's wide range of ISOGUARD products for insulation and earth fault monitoring and protection.

"Highest-up function" and "First-up function" give peace-of-mind

The purpose of ISOPAK2xx is to selectively address level and polarity of earth faults in live battery and DC power supply networks. An intelligent **highest up** function highlights the highest level of hazard in the system and only alerts the operator when conditions for an impending danger are present.

The first-up function latches the safety status lamps until reset. In this way the operator is immediately notified, but can await additional details following the next sequences of polarity scanning.

The LED bargraph meter continuously displays the earth current of the highest channel in the system at any time, as a percentage of the channel's set trip level. This **silent** annunciation will not distract the operator's attention, but at any time a glance at the colour of the bar reveals the present safety status of the whole system.

AG31 high sensitivity DC leakage current sensor

The DC leakage current is measured by electronic AG-sensors, inserted in each monitored load circuit. The measuring method is based on the principle that the **POSITIVE** and the **NEGATIVE** current in a fault free load circuit sum to zero.

If an earth fault is present the fast response sensor detects the difference between the two currents and produces a proportional error signal. The sensor is rated max 500VDC. A single ISOPAK2xx can be used in up to 4 galvanically separated 6 to 60VDC networks.

Pathfinder function

This function performs selective scanning of leakage current alternately from **POSITIVE** or **NEGATIVE** pole. **POLARITY** lamps (POS/NEG) indicate the polarity of the earth fault and may ease fault finding.

ISOPAK2xx automatically configures to operate in either a **FLOATING** (fully isolated), a **POSITIVE** pole or a **NEGATIVE** pole grounded DC network.

Multiple paralleled ISOPAK2xx

Any number of ISOPAK2xx with its Sensor Controller MML204 may be paralleled in a chain with a common master PC, to supervise and log any number of channels and networks.



Introduction

Earth Fault Monitoring

Earth faults arise when insulation levels decrease and residual current (earth current) flows from one or more of the network conductors to ground. The actual earth fault (the ohmic/resistive residual current) may be caused by many factors, but faults can be defined into two categories:

Spontaneous earth faults

Typical unpredictable earth faults are flash over, arcing, lightning strikes and incorrect wire connections. Spontaneous earth faults are by nature difficult to avoid.

Predictable earth faults

Typical predictable earth faults may be caused by insulation degradation in switchboard wiring and generator windings, engine or transformer fade, climatic stress (temperature and moisture), mechanical stress (vibration, friction, wear and tear), dirt or deposit of electrolyte, soot and foreign bodies. Predictable earth faults on the other hand can be avoided through continuous measurement of insulation levels combined with preventive maintenance.

Earth faults usually arise in peripheral equipment, seldom in the actual distribution circuit, and therefore continuous isolation monitoring of a circuit can give a good indication of the total system's **general health**.

Among the main reasons for earth fault monitoring are:

- Fire prevention, removing ignition sources
- Eliminating electrolytic corrosion between dissimilar metals
- Preventing damage to electronic equipment caused by stray potentials
- Operational malfunction (false signalling, measuring errors)

Battery banks today play an important role as prime and backup power sources for electronic systems. New methods for faster and time efficient detection of earth faults in battery systems and DC distribution networks have long been in demand.

Early warning ability to trace an earth fault at its very origin is a must for preventive maintenance. ISOPAK2xx is designed for high resolution measurements at very low levels and will maintain its accuracy and linearity within its measuring range. The AG Sensor can selectively detect leakage current and polarity down to 1mADC.

Product Information

ISOPAK2xx (Standard)

This is an all-in-one ISOPAK2xx module for DIN rail mounting inside the switchboard.

Standard and optional version are to be used with a Sensor Controller MML204



ISOPAK2xxW (optional package)

This special solution provides greater freedom for those who want more flexible placement of units.

All supervision functions are moved to the remote front-of-panel mounted DIN96 unit ISOVIEW200, parameters can be viewed and set on the unit screen. No restrictions on length of the communication cable between units.

All standard inputs and outputs remain in the ISOPAK2xxW, which is DIN rail mounted for easy access in the switchboard.



The MEGAICON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

IS
range

Norway
Denmark
United Kingdom
megacon



www.megacon.com
ELECTRONIC CONTROL AND INSTRUMENTATION
SELCOUSA.com

Innovation Beyond Tradition
Uniquely MEGAICON, simpler it can't be!


CE
Page: 2 of 12

General Information

The ISOPAK2xx performs continuous selective measurement, using non-saturating AG-sensors, of earth current level in up to 24 live circuits. The inputs can be individually programmed for channel identification, **Warning** and **Alarm** trip levels and trip delays.

All current carrying conductors must pass through the sensor to get correct reading. Protective earth, metal sheaths or braiding of any cable must NOT be passed through the CBCT.

The measuring technique is based on the principle that the currents in a fault free circuit sum to zero. If an earth fault is present in the load circuit, the sum of the currents is not zero. This current differential produces an error signal, proportional to the earth leakage.

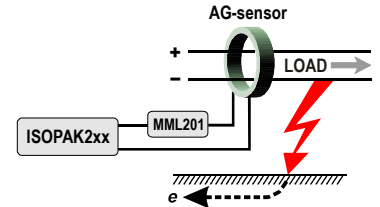


Measurement of earth fault current

Current Sensor Assembly SAG204 and SAG404

To ease installation the DIN rail mounted SAG204 unit contains a group of four interconnected AG current sensors. As each galvanic isolated AG-sensor is potential-free the SAG204 can freely be installed in up to four separate battery or DC supply systems having a common protective earth, at any voltage from 12 to 60VDC.

The group of 4 sensors are pre-wired for easy connection to ISOPAK2xx. Each SAG204 unit receive a sensor excitation signal from the common Sensor Controller MML204.

SAG404 is for connection of up to 4 of the IGT60A (60mm) sensor.



Sensor Controller MML204

An ISOPAK2xx system requires one common Sensor Controller MML204, which provides an excitation/reference signal to each of the system's total of 24 AG-sensors. MML204 also controls the leakage current polarity detection, an important feature for fault finding and preventive maintenance. ISOPAK200 will alternately measure leakage current from positive or negative pole for intervals of preset duration.

The **POS** LED lamp on ISOPAK2xx is lit during monitoring of the **POSITIVE** pole. The **NEG** LED lamp is lit during monitoring of the **NEGATIVE** pole. In order to detect the polarity of the earth fault in each of multiple separate DC supply networks. The MML204 can receive voltage input from a total of 4 DC networks. MML204 units can be paralleled for higher number of DC networks. The MML204 is rated to withstand an enduring single pole full grounding.


MML204 automatically configures ISOPAK2xx to operate in either a **FLOATING** (fully isolated), a **POSITIVE** pole grounded or a **NEGATIVE** pole grounded DC network.



System Expansion

Multiple paralleled ISOPAK2xx


Any number of ISOPAK2xx units with a Sensor Controller MML204 may be paralleled in a chain with a common master PC, to supervise and log any number of channels and networks.

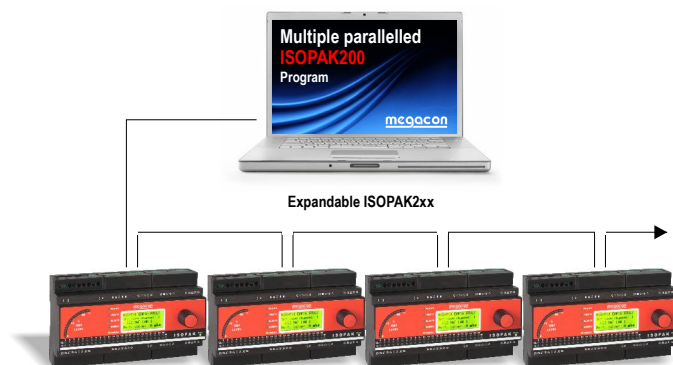

System Integration

One ISOPAK2xx in multiple DC supply systems

A single ISOPAK2xx with its Sensor Controller MML204 may monitor a total of 24 channels in up to four separate battery or DC supply systems (Net A, B, C or D). All four networks must have a common protective ground reference.

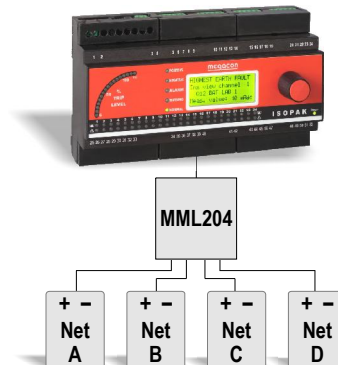

The MEGAICON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

IS
range

Norway
Denmark
United Kingdom
megacon



www.megacon.com
ELECTRONIC CONTROL AND INSTRUMENTATION
SELCOUSA.com

Innovation Beyond Tradition
Uniquely MEGAICON, simpler it can't be!



Page: 3 of 12

Operation

User Interface

A functional test can be performed by pressing the navigator knob during power up. This illuminates all LEDs.

Operation of the ISOPAK2xx is simple and user-friendly. Information is displayed and adjusted on the back-lit 4x20 character LCD-display via the navigator knob. The Navigator Knob is rotated left or right to select parameters and pushed to confirm selection.

LEDs indicate the status of the **system**:

● POSITIVE	Polarity of scanning process
● NEGATIVE	Polarity of scanning process
● ALARM	The system has unacceptably high earth leakage
● WARNING	The system has earth leakage which will not affect operation but requires attention
● NORMAL	The system is healthy

Two rows of LEDs indicate the safety status of each individual **channel**:

⚡ ● ALARM	Set alarm level is exceeded
⚠ ● WARNING	Set warning level is exceeded

Relay 1 is **fail safe** to indicate loss of auxiliary supply to the unit. The standard unit has the following relay outputs:

ALARM (Relay 1)	will notify if the alarm limit of any channel is exceeded
WARNING (Relay 2)	will notify if the warning limit of any channel is exceeded
Adaptable (Relay 3)	synchronises MML204 to ISOPAK2xx's pathfinder function

The RS485 Modbus RTU communication port provides information on each channel's measured data and safety status:

- Warning flags
- Alarm flags
- Individual channel measured data
- "Highest Up" channel

The internal buzzer can be programmed individually for each channel.

Highest Up


ISOPAK2xx automatically **locks** the indicating bargraph to the channel that has the system's highest relative earth current. The LED bargraph presents the instantaneous overall condition of the system. The bargraph indicates the earth current as a percentage of any channel's alarm trip level and shows the status for the channel which is closest to its alarm trip level.

LED Bargraph

The bargraph will display individual channel measurement when the operator scrolls through the status of each channel and reads each channel's earth current directly in mA on the LCD screen.

First UP

ISOPAK2xx automatically **locks** a lit safety status warning lamp, until reset.

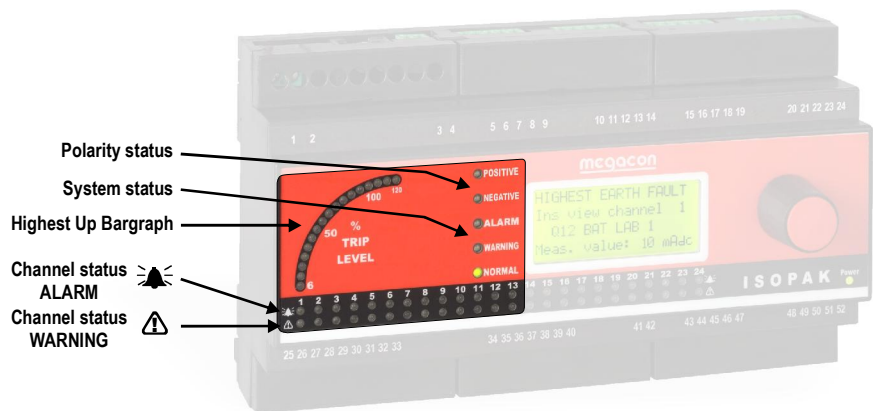




The MEGAON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

IS
range



Menu Summary

Main Navigation

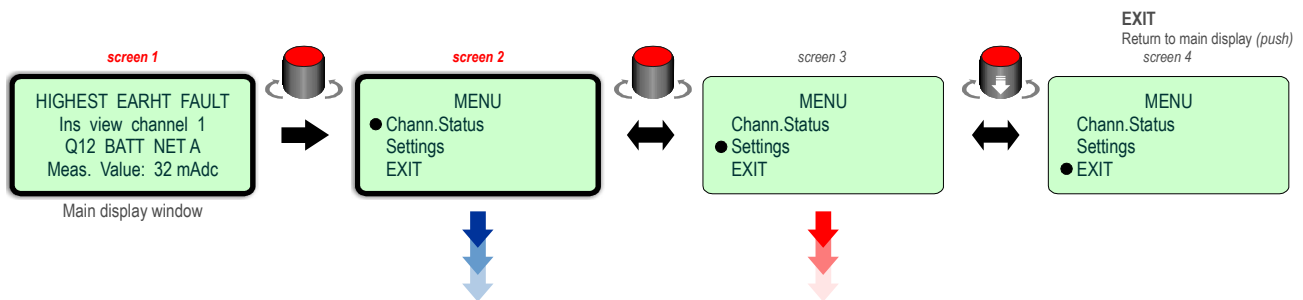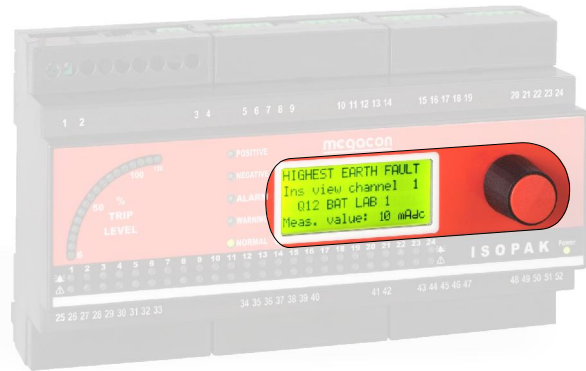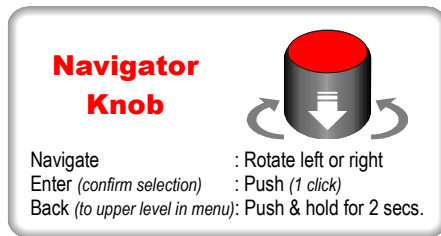

MAIN - Display Window (screen 1)

- This is the default screen displayed if the unit is left unattended for more than three minutes.
- The display shows the level of the channel that has the system's highest relative leakage current. For a channel to be included on this display, the channel's **Highest Up** parameter must be set to **ON**. (see screen 3.2.2)
- In an installation with negligible leakage current levels the screen may display a channel at random. The channel's location will be displayed if programmed.
- If the channel is blocked the measured earth current is not displayed.

MENU - Channel Status (screen 2)

- Select **Chann.Status** to read the safety status for all channels by rotating the Navigator Knob .
- In this mode the screen displays the measured earth current and the bargraph reads the relative trip level for the selected channel. The location or identification code will also be displayed if programmed.
- Each channel will show one of these safety levels: **NORMAL - WARNING - ALARM**
- If a channel's **WARNING** or **ALARM** trip level is exceeded for more than the channel's set time delay the unit will "record" this condition until the user resets the alarm, even if the earth leakage drops below the trip level. The alarm can not be reset if the trip level is still exceeded.
- For isolated (non-grounded) supply systems it may be appropriate to block earth current monitoring if the system's insulation level is within safe limits. If this option is included in the unit linking terminals 37 and 39, either with a fixed link or by an external Insulation Relay (*KRM169*) will activate channel blocking.
- During blocked operation unit displays **INSULATION OK** for all channels. The resetting of trips is not affected by the blocked operation.

The MEGAcon policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

IS
range

Norway
 Denmark
 United Kingdom
megacon






www.megacon.com
 ELECTRONIC CONTROL AND INSTRUMENTATION
SELCOUSA.com

Innovation Beyond Tradition
 Uniquely MEGAcon, simpler it can't be!

CE
 Page: 5 of 12

Menu Summary

Main Navigation

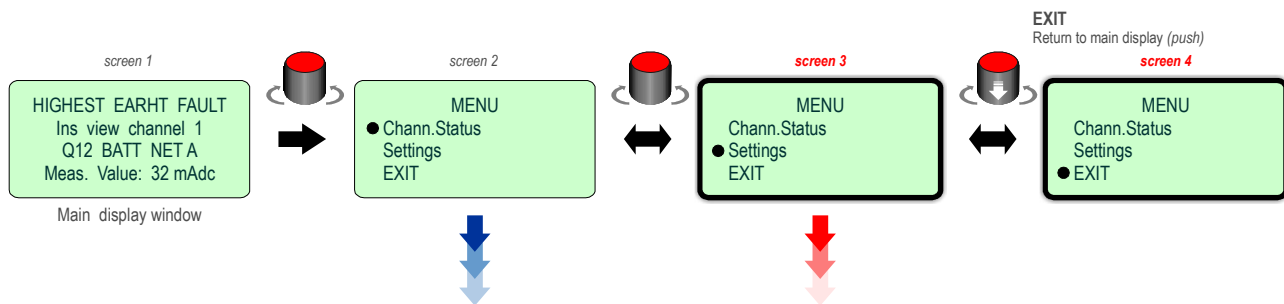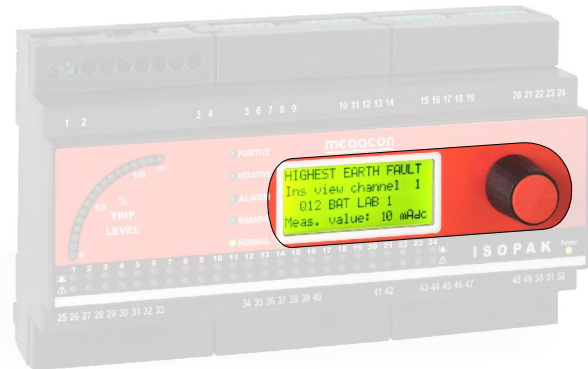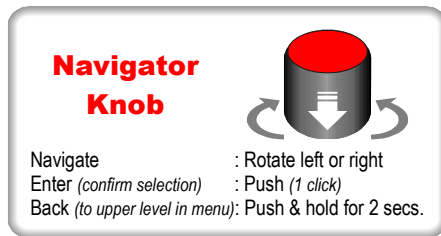

MENU - Settings (screen 3)

- Select **Settings** to read or change parameters.
- Rotate the Navigator Knob until the selected channel is displayed and push the Navigator Knob to access the channel.
- All user settable parameters are password protected against unauthorised or accidental setting. (**default password: 9876**) If an incorrect password is used the system will deny access. Push the Navigator Knob to revert and try again. Once the password has been accepted you can change the settings.
- Each channel has a unique text field identifying the location of the monitored channel. To edit the text, push the Navigator Knob to display the dot cursor on the screen. Select the location text and push the Navigator Knob to confirm the option. The screen cursor should now change shape to an arrow. Edit the text with the Navigator Knob. Rotating the knob will change the letter displayed and a push verifies the selected letter.
- **Sensor mode (Sens.)** and **Presentation mode (Pres.)** are both factory set.
- **Highest Up** selects whether this channel is included (ON) in the Highest Up display.
- **Full Scale (FSD)** is the range of input signal that determines the channels max trip level. (*this parameter is factory set*)
- The **offset function** is factory preset:
 Only when considered necessary each channel may manually be individually **offset** to compensate the fixed bias-signal generated by the sensor itself. Select option SET, the unit automatically reads and offsets the bias-signal on the specific channel. After a few seconds the display message will change to ON option. Now the unit will subtract the offset level. The offset programming **must never** be set to or left in the OFF position.
- The built in alarm buzzer is activated when a channel's alarm limit is exceeded (ALARM). Push the Navigator Knob to mute the buzzer. It is also possible to change the sound level.

MENU - EXIT (screen 4)

- Select **Exit** to return to the main display window.

The MEGACon policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

IS
range

Norway
 Denmark
 United Kingdom
megacon



www.megacon.com
 ELECTRONIC CONTROL AND INSTRUMENTATION
SELCOUSA.com

Innovation Beyond Tradition
 Uniquely MEGACon, simpler it can't be!

CE
 Page: 6 of 12

Navigation Map

Navigation Map

The map illustrates the sequence of screens and the actions required to navigate between them. Screens are represented by green boxes, and navigation actions are indicated by arrows and button icons.

Screens and Content:

- Standby screen (screen 1):** HIGHEST EARHT FAULT, Ins view channel 1, Q12 PUMP LAB 1, Meas. Value: 32 mAac
- screen 2:** MENU, Chann.Status, Settings, EXIT
- screen 3:** MENU, Chann.Status, Settings, EXIT
- screen 1.1:** Push to deactivate horn
- screen 2.1:** Chann. 01 Status, Q12 PUMP LAB 1, 0 mAac, OK
- screen 3.1:** SYSTEM SETTINGS 1/2, Sound lev: 10, BACK
- screen 3.2:** Chann. 01 Setting 1/3, Q12 PUMP LAB 1, Sens: AC, Buzz: On, Pres: AC, Rst: Atuo
- screen 3.2.1:** Chann. 01 Setting 1/3, Q12 PUMP LAB 1, Sens: AC, Buzz: On, Pres: AC, Rst: Atuo
- screen 3.2.2:** Chann. 01 Setting 2/3, FullScale: 100 mAac, Highest up: On, Status: Normal
- screen 3.2.3:** Chann. 01 Setting 3/3, Alarm: 50% dly: 5s, Warning: 50% dly: 5s, Offset: Off, BACK
- screen 3.3:** SYSTEM SETTINGS 1/2, Sound lev: 10, BACK
- screen 3.4:** SYSTEM SETTINGS 1/2, Sound lev: 10, BACK
- screen 2.2:** Chann.24 Status, Q12 PUMP LAB 1, 0 mAac, OK
- screen 2.3:** MENU, Chann.Status, Settings, EXIT
- screen 2.4:** MENU, Chann.Status, Settings, EXIT

Navigation Actions:

- EXIT:** Return to Standby screen (push)
- Enter (1 click):** push (1 click)
- Changing Settings:** for ch.01 to ch.24
- Return to MENU*:** push & hold for 2 secs
- Return to Standby screen:** push & hold for 2 secs
- See Ch. Status Ch.01 to Ch.24:** push (1 short) to go to alarm channel
- Back to Chann.Status:** push & hold for 2 secs
- Alarm reset:** Alarm reset is individual for each channel. Press 1 short pulse to reset an alarm.

Legend:

- Parameter Settings: (Password Protected)**
- Channel ID text**
- Sens: *(factory set)**
- Pres: *(factory set)**
- Buzz: ON or OFF**
- Rst (Reset): AUTO or MAN**
- Full scale range *(factory set)**
- Highest Up: ON or OFF**
- Status: Normal / Warning / Alarm**
- BACK:** to screen 3.2 (push 2 sec)

(text and parameters on screens for illustration purpose only)

Options and description for screen 3.2.1

- Sens: Channels measuring principle (factory set)
- Pres: Channels measuring unit (mA) (factory set)
- Buzz: Select ON or OFF to activate/deactivate buzzer
- Rst: Select MAN to activate channel lamps manually
- Select AUTO for automatic reset of lamp after

Options and description for screen 3.2.3

- Alarm trip level in percent of FSD range
- Alarm Relay, delay in seconds. (0-30 seconds)
- Warning trip level in percent of FSD range
- Warning Relay, delay in seconds. (0-30 seconds)

Installation Guide

ISOPAK2xx, the Sensor Controller MML204 and the SAG204 Sensor Assembly are for DIN35 rail mounting. ISOPAK2xx has 3 relay outputs (terminals 25 to 33). Relay 1 has **fail to safety** functionality. This means that the relay normally operates with a hold current, and will notify loss of auxiliary voltage.


- Relay 1** operates when the danger limit of a channel is exceeded (ALARM)
- Relay 2** operates when the warning limit of a channel is exceeded (WARNING)
- Relay 3** synchronises MML204 to ISOPAK2xx's pathfinder function

ISOPAK2xx uses AG31 sensors for directional, **selective** measurement of earth current in DC networks.

- Install one common MML204 for each group of 24 AG-sensors
- An AG type sensor must be fitted in each monitored circuit.
- The sensor measures earth faults on the load side of the sensor.
- Both loaded wires must pass through the sensor.
- Protective earth (PE), screening braids and armament **must not** pass through the sensor.
- The output cable from the sensor should be screened if over 10 meters.
- RS485 port for connection to external PC or bus. (*more information in following pages*)
- Pluggable terminals are used throughout

Connect output from each SAG204 to ISOPAK200 channel groups A, B, C, D, E, F as shown below

ISOPAK SAG204	ch. groups A	ch. groups B	ch. groups C	ch. groups D	ch. groups E	ch. groups F
Term. 1 (ch. 1)	Term. 5 (ch. 1)	Term. 10 (ch. 5)	Term. 15 (ch. 9)	Term. 20 (ch. 13)	Term. 43 (ch. 17)	Term. 48 (ch. 21)
Term. 2 (ch. 2)	Term. 6 (ch. 2)	Term. 11 (ch. 6)	Term. 16 (ch. 10)	Term. 21 (ch. 14)	Term. 44 (ch. 18)	Term. 49 (ch. 22)
Term. 3 (com.)	Term. 7 (com.)	Term. 12 (com.)	Term. 17 (com.)	Term. 22 (com.)	Term. 45 (com.)	Term. 50 (com.)
Term. 4 (ch. 3)	Term. 8 (ch. 3)	Term. 13 (ch. 7)	Term. 18 (ch. 11)	Term. 23 (ch. 15)	Term. 46 (ch. 19)	Term. 51 (ch. 23)
Term. 5 (ch. 4)	Term. 9 (ch. 4)	Term. 14 (ch. 8)	Term. 19 (ch. 12)	Term. 24 (ch. 16)	Term. 47 (ch. 20)	Term. 52 (ch. 24)

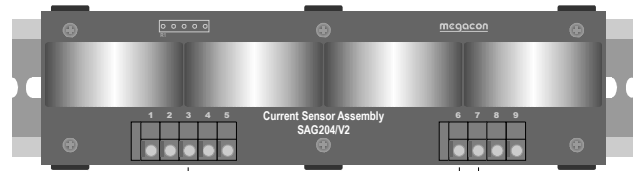


Connect output from each SAG204/404 (up to 6 units) to ISOPAK2xx channel groups A, B, C, D, E, F

To MML204
Term. 14 & 15

Connect DC system voltage (externally fused 2 amps) to appropriate MML204 NET

The AG-Sensors are fully interchangeable and the sensor assembly versions can be mixed as appropriate.

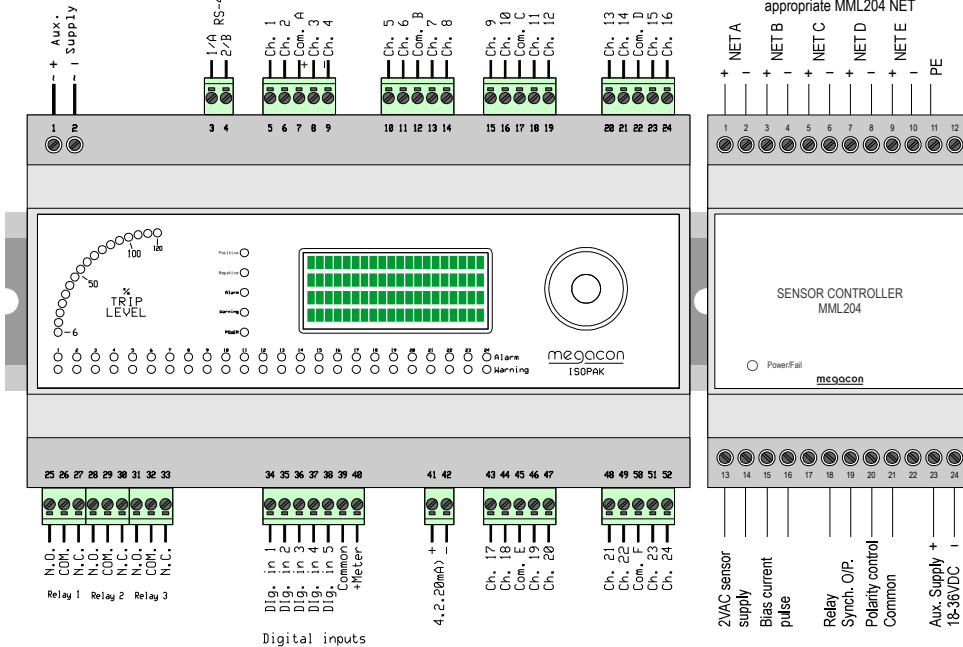

The MEGACon policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.



Description and protocol - ISOPAK on Modbus**ISOPAK on Modbus General Description****Port**

The ISOPAK unit has an insulated RS485 port (1000V) intended for system configuration by ISOPAK IsoPC program and for Modbus RTU communication through the same port. Baud rate is 19200 bits/sec. Only function 03 - Read holding register is implemented.

ISOPAK Modbus communication

The ISOPAK Modbus protocol is a subset of the Modbus protocol as described in this documentation. ISOPAK's native protocol is the Megabus L protocol with ISOPAK functionality described in the ISOPAK protocol documentation.

The ISOPAK unit is able to communicate according to both protocols at the same time, as the unit will recognise the protocol of each message received.

Initial configuration

A normal procedure would be to connect the ISOPAK unit RS485 port via a converter to USB Comport of PC with IsoPC program for configuration and testing and then connect the ISOPAK unit to the Modbus.

The IsoPC program has facilities for reading data from the ISOPAK as well as downloading parameters etc. For setting parameters IsoPC must be used. When system parameters have been set Modbus communication may be used for reading data from the ISOPAK.

IsoPC has a facility for testing Modbus communication under the Modbus tab.

In the IsoPC program prepare for Modbus configuration:

- Open **Settings** tab, make sure correct serial port is set and baud rate is set to 19200 bits/sec.
- Open the Instrument identity flip and set and download the address to be used on ModBus. Start with 1 on the first Isopak in a system.

Use IsoPC for system configuration:

- Flip open "Parameters" see IsoPC documentation for parameter setting.

Test Modbus protocol under Modbus tab

Set ISOPAK unit address according to downloaded address.

Click on buttons for:

- Reading input 1..8
- Reading input 9..16
- Reading input 17..24
- Reading 4 control lines
- Reading alarm and warning flags
- Reading highest up channel and value

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

IS
range

Description and protocol - ISOPAK on Modbus**ISOPAK Modbus Protocol**

- The ISOPAK protocol is implemented as Modbus RTU.
- Function 03- Read-holding registers is the only implemented function.
- There are no start/stop markers in the Modbus protocol.
- Separation between messages is based on separation time.
- In our implementation no parity is used pr. byte.
- CRC frame checking is used for testing integrity of a complete message.

Query

Field name	Example
Slave address	11
Function	03
Starting address hi	00
Starting address lo	23
Number of points hi	00
Number of points lo	02
Error check	CRC

Response

Field name	Example
Slave address	11
Function	03
Byte count	04
Data register hi	03
Data register lo	FF
Data register hi	03
Data register lo	FF
Error check	CRC

Memory map for ISOPAK registers

Reg no.	
0	Input 1, 16 bits of measured data
to	
23	Input 24, 16 bits of measured data
24	Digital control inputs 4 lsb holds state of input. Bit 0 is first bit closed contact=1
25	Alarm flags for chan 1..16
26	Alarm flags for chan 17..24 and warn flags for chan 1..8
27	Warn flags for chan 9..24
28	Highest up chan no
29	Highest up value

Reg data additional description

Reg 0..23	Holds 16 bits data that has been scaled relative to FSD = 10 000.
Reg 25..27	Is a 48 bit array where msb in reg 25 is first bit and lsb in reg 27 is last bit. This 48 bit array is split so that 24 alarm flags appear first, then 24 warn flags.
Reg 28	The highest up channel appears in the 5 lsb bits as 0..23 for chan 1..24.
Reg 29	Highest up in range 0..1023 = 0..120 % relative to the alarm level for the highest up channel.

Any register from 0 to 29 can be read first from up to 30 registers (all) read in one message. Register 30 and up will read zero.

Note:

The unit will not respond to register polls higher than Reg. 29.

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

IS
range



Description and protocol - ISOPAK on Modbus**ISOPAK Modbus message types**

The following registers in ISOPAK may be read by Modbus: (all start registers and lengths between registers 0 and 29 are allowed)

Input, channel 1..8 Query

Starting register address hi/lo	\$0000	(Chan 1 is in register 0)
Number of points hi/lo	\$0008	

Input, channel 1..8 Response

Byte count	\$10	(16 bytes to receive)
Followed by register 0..7, 8x16 bits = 16 bytes of Data hi/Data lo from chan 1..8.		

Input, channel 9..16 Query

Starting register address hi/lo	\$0008	(Chan 9 is in register 8)
Number of points hi/lo	\$0008	

Input, channel 9..16 Response

Byte count	\$10	(16 bytes to receive)
Followed by register 8..15 8x16 bits = 16 bytes of Data hi/Data lo from chan 9..16.		

Input, channel 17..24 Query

Starting register address hi/lo	\$0010	(Chan 17 is in register 16)
Number of points hi/lo	\$0008	

Input, channel 17..24 Response

Byte count	\$10	(16 bytes to receive)
Followed by register 16..23. 8x16 bits = 16 bytes of Data hi/Data lo from chan 17..24.		

Input, 4 digital control inputs Query

Starting address hi/lo	\$0018	(register 24 holds control inputs)
Number of points hi/lo	\$0001	

Input, 4 digital control inputs, Response

Byte count	\$02	(2 byte to receive)
Followed by register 24, digital control inputs. 16 bits = Data hi/Data lo. State of the 4 inputs is in the 4 least significant bits of Data lo.		

Flags, alarm and warning, Query

Starting register address hi/lo	\$0019	(register 25..27 holds flags)
Number of points hi/lo	\$0003	

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.




Description and protocol - ISOPAK on Modbus**Flags, alarm and warning, Response**

Byte count	\$0006	(2 x 24 flags = 48 bits = 6 bytes = 3 16 bits words).
Data hi register 25	8 bits Alarm chan	1..8
Data lo register 25	8 bits Alarm chan	9..16,
Data hi register 26	8 bits Alarm chan	17..24
Data lo register 26	8 bits Warn chan	1..8
Data hi register 27	8 bits Warn chan	9..16
Data lo register 27	8 bits Warn chan	17..24

Highest up Query

Starting address hi/lo	\$0028
Number of points hi/lo	\$0002

Highest up Response

Byte Count	\$0002
Data register 28	Highest up channel 0 = chan 1, 23=chan 24.
Data register 29	Highest value relative to alarm limit. Range 0..1023 where 1023 is 120% of alarm limit. Alarm limit (100%) is at 852.

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

IS
range

Norway
Denmark
United Kingdom
megacon



www.megacon.com
ELECTRONIC CONTROL AND INSTRUMENTATION
SELCOUSA.com

CE
Page: 12 of 12

Innovation Beyond Tradition
Uniquely MEGACON, simpler it can't be!