KCM161FQx



- Designed for non-grounded networks with Frequency Converters
- Direct connection up to 690V line voltage, up to 1,4kV with HV Adapter
- Monitoring during both live and standby conditions
- For use in land, marine and offshore installations
- Complies with IMCA D 045 Code of Practice
- Parallelling Disable Function
- · Immune to earth capacitance and voltage surges
- Analogue output proportional to meter reading
- Optional Mohm slave indicator

Specifications

KCM161FQx $0-1000k\Omega - \infty (<6M\Omega)$ Scale range: Network line voltage: Direct 0-690V (40-500Hz) Up to 1,4kV with HV adapter General 100-120, 200-240, 380-415 or Auxiliary Supply: 440-460VAC, 40-70Hz (Fuse 0.5A) Optional Voltage: 12-24, 48 or 110VDC (Fuse 2A) Supply tolerance: ± 10% Power rating: 1,5VA AC: 100VA - 250V/2A max. Contact rating DC: 50W - 100V/1A max. Analogue Output: Up to 20mA, max 500R Up to 10V, min 100kohm F-versions (other on request) Temperature: -20 to +70°C Weight: 0.6kgs Front protection: IP21

INTELLIGENT SETTING ASSISTANCE

KCM161FQx has a built-in Assistance tool for setting/verification of the trip levels and the analogue output.

When either the **Warning** or **Alarm potmeter** on the front is operated by user, the slave meter goes into **Assistance Mode** and meter reading and analogue output will reflect the potmeter setting.

How to set alarm levels:

Firstly adjust potmeter fully clockwise (see that meter goes to the top), then adjust potmeter down to required **Warning** or **Alarm** setpoint. In this mode, the Alarm or Warning LEDs (depending on which potmeter is adjusted) will flash quickly Red/Yellow.



Without any movement of potmeters, the meter will revert to normal Insulation Monitoring Mode after approximately 10 seconds.

How to test analogue output signal:

Adjust any trip level potmeter to activate Assistance Mode. **Example:** On a 4-20mA output, adjust potmeter fully anti clockwise for 4mA and fully clockwise for 20mA.


The KCM161FQx range is designed to comply with specification IMCA D 045 "Code of Practice for the Safe Use of Electricity Under Water" issued by IMCA.

Application

The digitally controlled KCM161FQx is designed to monitor the insulation level between a nongrounded (IT) AC mains and its protective earth in systems with frequency converters. The unit is for land, marine and offshore use.

An AC or DC auxiliary voltage is required for the unit, if powered from a separate source the network can also be monitored during inactive (standby) conditions. Only **ONE** KCM161FQx can be connected to each IT-system. The ohmmeter and the triple-zone status LEDs give at a glance the clear safety message:

-ALARM (red zone)

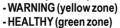



General

IDV MEASURING PRINCIPLE

Insulation is measured between the complete galvanically interconnected AC network and its protective earth. The unit injects a DC measuring signal into the monitored system. The signal flows to ground via the path of the insulation fault, the level of flow indicates the insulation resistance. The measuring accuracy is not influenced by any normal kind of load attached to the AC network.

This unit is used for any land, marine or offshore installations. Start of monitoring function is delayed when auxiliary power is switched on (default 10 secs delay). The unit has minimum of 9 seconds detection time for any insulation fault.

Trip levels and delays are settable on unit rear. A trip LED flashes when the trip level is passed, the relay trips when the delay has elapsed. The timer resets if the fault is removed during countdown.

MEGGER SAFE

When auxiliary power is **OFF** the unit input is automatically protected against "megger" test voltages up to 1.4kVDC, and incorrect measurements caused by the unit's input impedance are avoided.

OUTPUTS

The KCM161FQx has an isolated **analogue output** proportional to meter reading. If output is used for remote meter reading, we recommend 0-1mA for the slave indicator.

SAFETY

When a voltage adapter (CHx) is used the signal to terminals 4 and 6 on KCM161FQx is limited to a safe level, avoiding any dangerous voltage exposure to personnel.

HIGH VOLTAGE ADAPTOR

 $Voltage\ Adaptor\ CH163-1, 4\ is\ used\ for\ Insulation\ Guard\ KCM161FQx\ when\ the\ monitored\ line\ voltage\ is\ higher\ than\ 690VAC.$


The unit meets IEC60092-504 and the relevant environmental and EMC tests specified in IEC60068/60092 and IEC61000/60533 respectively, to comply with the requirements of the major Classification Societies.

Norway
Denmark
United Kingdom



respectively, to comply with the requirements of the major Classification Societies.

KCM161FQx

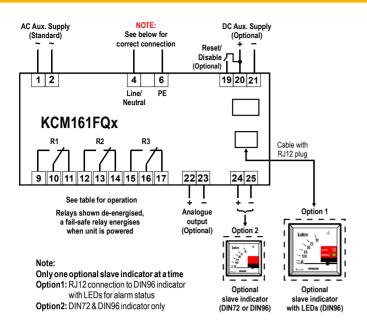

Analogue Output

KCM161FQx have an analogue output proportional to meter reading. (Special outputs are available on request)

Add suffix from table below to type designation to specify output required:


O/P1	0 - 10mA	O/P6	N/A
O/P2	0 - 20mA	O/P7	N/A
O/P3	4-20mA	O/P8	0 - 10VDC
O/P4	N/A	O/P9	N/A
O/P5	N/A	O/P10	N/A

Reset / Parallelling Disable Function

KCM161FQx has a built-in disable function. When connecting two or more IT-networks together only one unit can be active, the other(s) must be disabled. When unit is disabled the power led will flash every 2 seconds to indicate that unit is inactive.

Use a potential free contact on terminal 19 & 20 to activate the disable function (after 2 secs). When activated the measuring input terminal 4 will be internally disconnected.

A pulse (60mS - 2 secs) on terminal 19 & 20 will only reset any latching alarm.

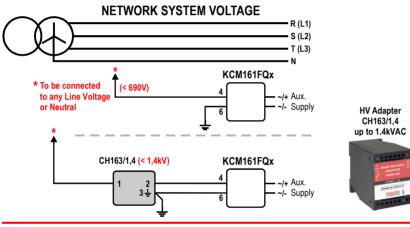

Relay Operation

Scale range: $0-1000k\Omega - \infty$ (>6M Ω)				
	Warning	Alarm	Fail Safe	Latch
R1	✓			
R2		√		*/
R3		\		*/


Model	Latch	Output	Adjustments	Trip level	Delay
KCM161FQ	-	X	WARNING:	0-1ΜΩ	0-30secs
KCM161FQG*	Х	X	ALARM:	0-1ΜΩ	0,1-3secs

Coloured sectors show nmended areas of settings: - Indicates alarm trip zone - Indicates warning trip zone - Indicates healthy zone

Range (slave indicator)

Output table (example for 4-20mA)


Value (scale)	mA output		
0kΩ	20.00mA		
10kΩ	15.22mA		
20kΩ	12.32mA		
30kΩ	10.61mA		
50kΩ	8.68mA		
100kΩ	6.69mA		
300kΩ	4.98mA		
1ΜΩ	4.28mA		
Open (>6MΩ)	4.00mA		

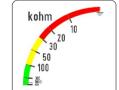

megacon

Output diagram


						0kΩ	20.00mA
						10kΩ	15.22mA
						20kΩ	12.32mA
						30kΩ	10.61mA
						50kΩ	8.68mA
						100kΩ	6.69mA
						300kΩ	4.98mA
						1ΜΩ	4.28mA
100k	50k	30k	20k	10k	0k	Open (>6MΩ)	4.00mA
	••••				***		

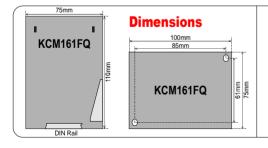



300F

Dimensions for Slave instrument

	DIN 72	DIN96
Α	72 x 72mm	96 X 96mm
В	68 x 68mm	92 x 92mm
С	64mm	64mm

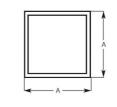

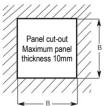

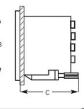

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication

ORDERING EXAMPLE:

KCM161FQ Type: 200-240VAC Aux. Supply: Network Voltage: 690VAC (O/P3) 4-20mA Analogue O/P: Range: 0 - 1000kohm



Denmark **United Kingdom**

Norway

20.00mA

15,00m/

5.00mA

Open (> 6M)

1M

